



Even fine groove stains can be removed with light force Cleaning Brush For Entrance & Balcony (Extendable Handle)


Introduction

The brush can easily remove the floor stains with light force.



Brushes get into fine grooves and scrapes out dirt

Scraping brushes firmly penetrate fine grooves in concrete, tile, and exterior walls to remove dirt.

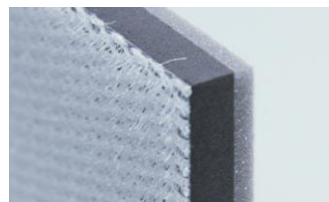

Polyethylene is used for clean use because it does not absorb water

The use of polyethylene, which does not absorb water, allows for clean use.



The head part can be changed vertically or horizontally

The direction of the head can be changed according to the area to be washed, allowing for the removal of dirt from various places.



Extendable handle for easy washing high places

The extendable handle allows washing without bending at the waist, such as on the floor or upper part of an exterior wall (75~105cm).



Brushes are replaceable for economical use

Replacement brushes (CVB02) are available so that brushes can be used longer and more economically.



The structure that keeps hands clean even when washing high places

Water and detergent that run down the handle pass through the inside of the grip, so your hands do not get dirty even when washing the upper part of the wall surface.

PICK UP!



The direction of the head can be changed vertically or horizontally with the detach button!



Press the removal button as indicated by the arrow and remove the stand from the handle.



Rotate the stand 90 degrees, and with the handle and stand engaged, **push the removal button until it engages.**